

EdenPURE® GEN30 Hybrid

EASY START-UP GUIDE

1. Plug the power cord supply into a grounded wall outlet (120V, 60Hz)
2. Press the **power button** to turn the heater on (The heater must be turned on first in order to use your remote control.)
3. Mode Key Functions:
 - a. Press the mode button one time to set to Eco. You can adjust your temperature with the **arrow keys** next to the **mode button**. The temperature will then display.
 - b. Press the **mode key** two times to set to High. You can adjust your temperature with the **arrow keys** next to the **mode button**. The temperature will then display.
 - c. Press the **mode key** three times to set to Low. You can adjust your temperature with the **arrow keys** next to the **mode button**. The temperature will then display.
 - d. Press the **mode key** four times to turn the heater off.
4. Turning the Heater to Standby Off
 - a. To turn the heater to Standby Off, Press the **Standby button**. The heater will shut off but the fan will continue to run until all the heat has been expelled.
 - b. If you are not going to use the heater for a long time press the **power button** to fully shut down the heater.
5. To set the thermostat, press the **mode button**, and set to Auto mode. Press the **arrow up** or **arrow down** buttons to set the desired temperature.
6. Setting the timer:
 - a. You must use the remote control to set the timer.
 - b. Turn heater on by pressing the **power button** on the heater.
 - c. Press the **timer button** on the remote control until set time starts flashing. The default is 3 hours.
 - d. Press the “+” button to increase the time or the “-” button to decrease the time.
 - e. Timer can be set up to 12 hours.
 - f. The timer will set after the LED display stops flashing.
 - g. The heater will shut off automatically when the set time is reached.

